




Installation Instructions

HHW\HHWT Series - Cased Hot Water Coil

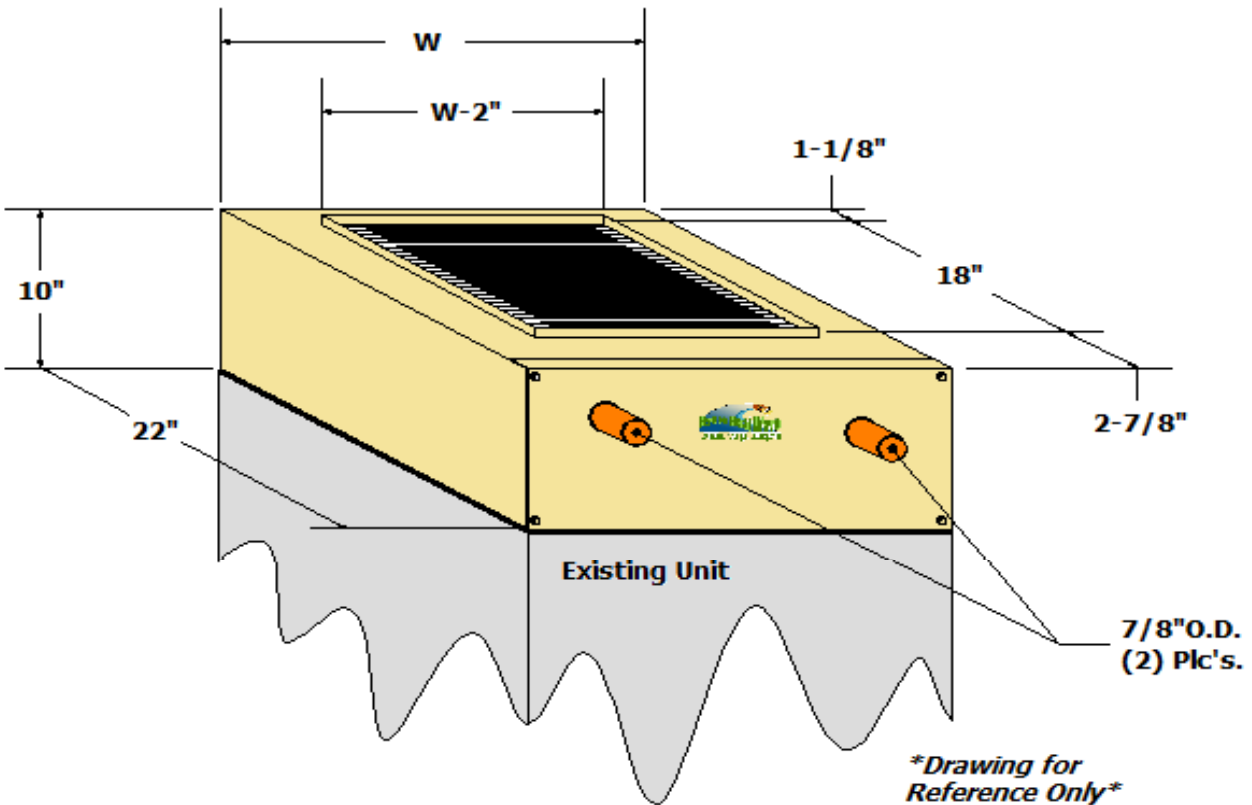

- 1) Position the Hydro Heat Wave unit over the discharge of the the existing air handler
- 2) Seal off and make air-tight around fit-up
- 3) Install circulator pump (NOT included) and close loop as required.

**Coil is multi-positional and may be installed vertically or horizontally; up-flow or down-flow.*

**Recommended for installer to use supplied copper sweat, or supplemental brass fittings for installation.*


**Installer must verify that all connections meet applicable building codes and industry standards.*

INSTALLATION



Diagram of Suggested Installation Using a Conventional Water Heater

**** Local construction codes may impose additional requirements that are not shown here. Always abide by your local code. ****

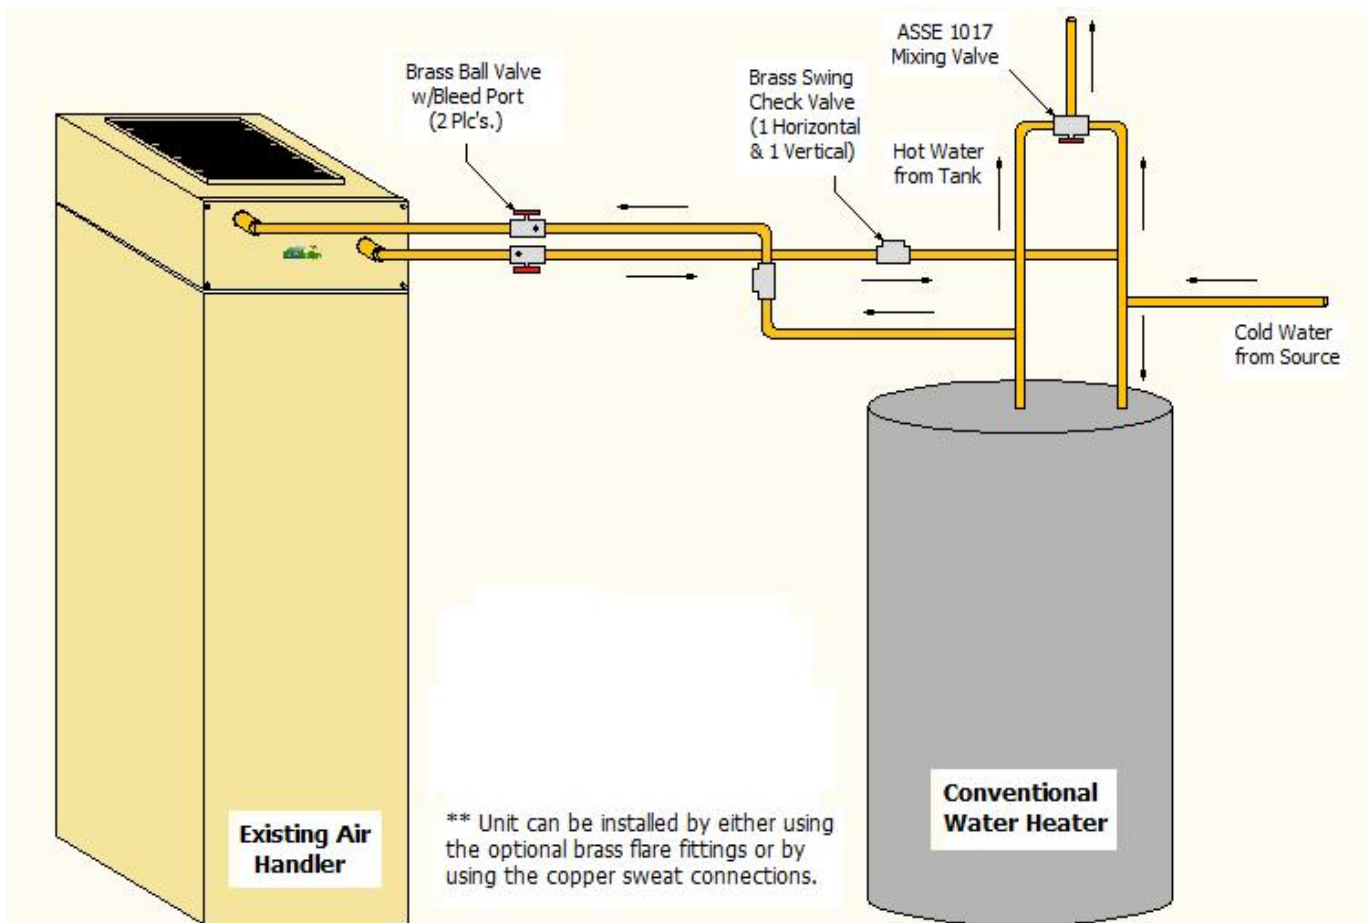

**** Circulation pump is not shown on diagram but must be installed. Placement of pump is at the discretion of the installer. Pump is NOT included with the Hydro Heat Wave unit. ****

Hydro Heat Wave

400 Dean St., Gilmer, TX 75644 phone: 903-680-2465 fax: 888-477-5014 sales@hydroheatwave.com

Hydro Heat Wave is solely owned, operated, trademarked, and copyrighted by GLA Sales. All rights reserved. 2009